


# Shooting Star Instructions

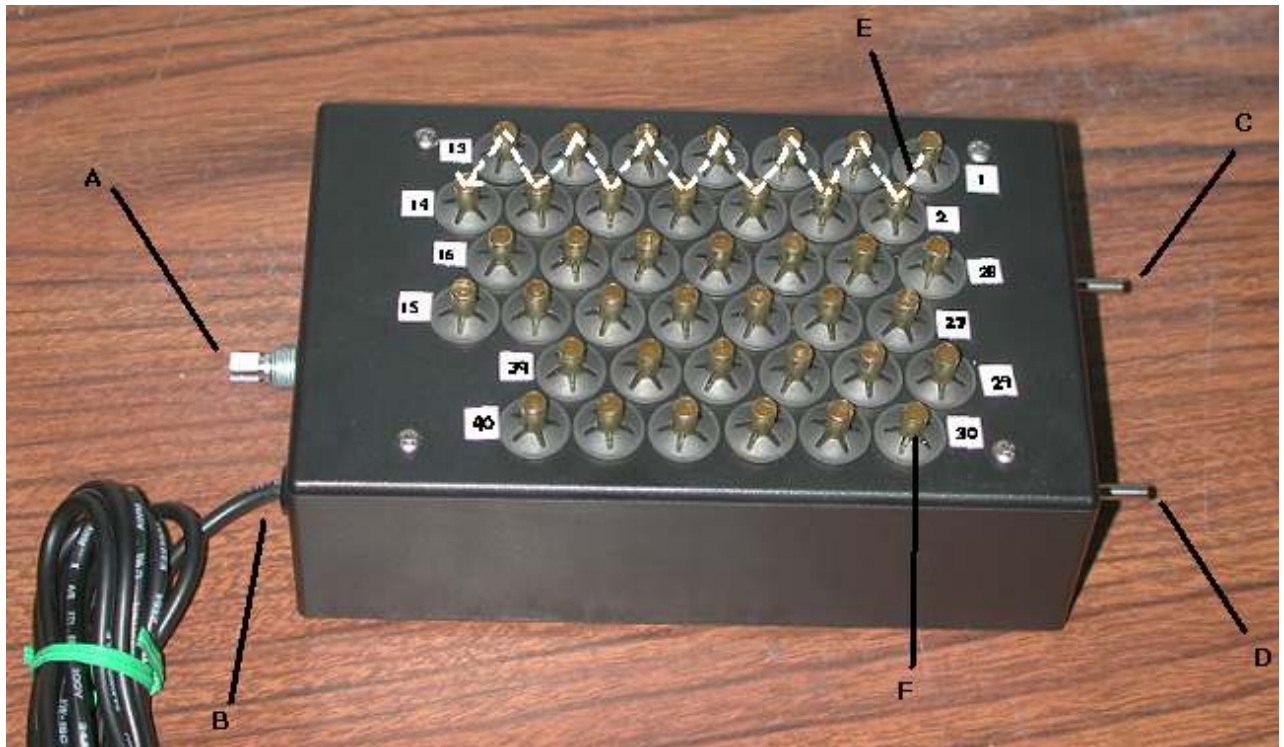

## Key:

- A- Dimmer Control
- B- Power Supply 9V Wall Wart
- C- Speed Control of Firing LEDs
- D- Delay Control of Effect (15 seconds to 11minutes)
- E- Path LEDs Will Light
- F- LED Outputs

## Notes:

- Controls turned all the way to the user's left are at their lowest settings. I.E. Delay will be 15 seconds, Speed will be at it's slowest, Dimmer will make the LEDs their dimmest.
- Inversely, controls turned all the way to the user's right are at their highest settings. I.E. Delay will be 11 minutes, Speed will be at it's highest (not recommended), Dimmer will make the LEDs their brightest.
- Settings should all be tested to find the appropriate balance required by the user.
- Numbers next to each LED Output indicate the number in which that specific LED will fire in one cycle.

## Installation:

Plug each Shooting Star Strand (not shown) onto each LED Output. This can be done one at a time while you are installing each end of fiber into the ceiling, or all Shooting Star Strands can be connected to the LED Outputs simultaneously, and then run out into their respective sequence holes in the ceiling. It is recommended that one strand be installed to the box and in the ceiling at a time, so as not to cause confusion with tangled fibers or improper order.