

APPLICATION

Steps, wayfinding, exit stairs, access corridors, perimeter light.
indoor and outdoor.

N-SERIES TUBELIGHT

N-SERIES -STT-xx

N-SERIES-LED-xx

Incandescent - Red - Green - Yellow



Pictures and Diagrams



Lighting Features	
LAMP	Incandescent or LED bulb 0.25W
COLOR	Incandescent (2700K), Red, Yellow and Green
AVG LIFE	100,000 Hrs
MAX LENGTH	300 Lamps

Electrical Features	
INPUT VOLTAGE	12 or 24V AC or DC power system Do Not Plug Directly on 120V
CONNECTIONS	Standard lead 18"
POWER DRAW	0.25 to 1.25W/ft
OPERATING TEMP	-30° to 40°C High ambient temperature will shorten LED life
CONTROL	Dimmable with SB class transformer


Mechanical Features	
CONSTRUCTION	Rigid UV resistant PVC
SPACING	2.5" to 12"
BEND RADIUS	24"
WEATHERABILITY	IP 44

Transformers	Power	Max. Length
SBLT-1025-24	25W	7 ft
SBLT-1060-24	60W	18 ft
SBLT-1100-24	100 W	30 ft




Accessory Details


NTL-Aisle

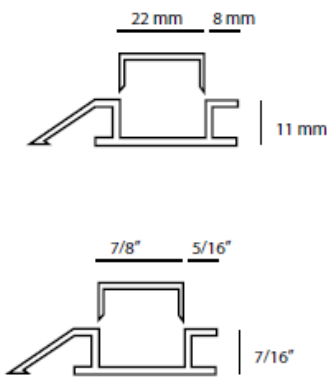

NTL-Wall

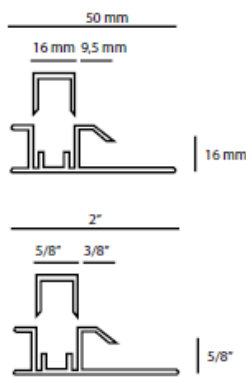

NTL-Step

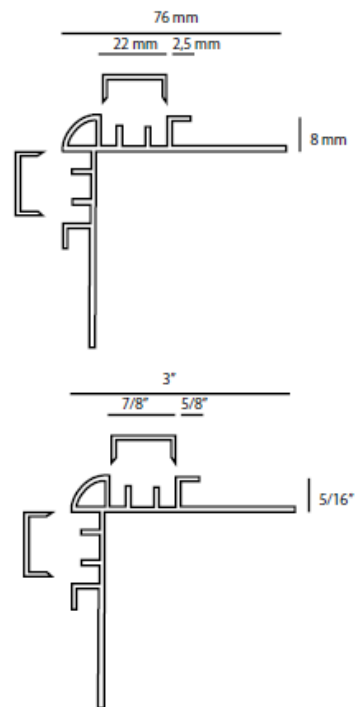

Part #	Description	Material
NTL-Aisle	N-Series Carpet-to-Aisle Extrusion	Black Thermoplastic
NTL-Wall	N-Series Carpet-to-Wall Extrusion	Black Thermoplastic
NTL-Step-x	N-Series Step Nose Extrusion - (S)ingle or (D)ouble caps	Anodized Aluminium



Lamp Specifications

Part #	Description	W/Lamp	Lamp Life	Lamp Color
NTL-STT-x"-x	N-Series Standard Tube Light	0.25	100,000 hrs	Clear
NTL-ELL-x"-x	N-Series Extra Life Tube Light	0.20	200,000 hrs	Clear
NTL-LED-x"-x	N-Series LED Tube Light	0.27	50,000 hrs	Red/Green/Yellow

The N-Series lighting system offers the most reliable, durable and long lasting step-and-floor lighting option available.

N-Series takes traditional tubelighting to the next level. Custom lamp spacing ranging from 2.5" to 12" o.c., or as ordered. Available in either 12V or 24V, and will operate on AC or DC power. When powered by the SB Class transformers, the system is fully dimmable from 0-100% with standard magnetic dimmers and lighting control systems.

Offers a true 100,000 hour life with 0.25W lamps offering minimal maintenance and operating cost over an extensive system life.. Extra Long Life has an unprecedented 200,000 hour life with 0.20W lamps. Red, Yellow or Green monochrome LEDs can add a splash of colour.

N-Series lights may be used with thermoplastic or aluminum mounting extrusions to provide a decorative finish and protection from daily wear. Extrusions offer a seamless finish that marries to walls, carpeting, tile work, and flat surfaces.

Easy to specify, easy to order, easy to use. N-Series is the only product needed to create traditional theater lights, safety step and aisle lights, retro-style ceiling and floor lights, decorative outlines, perimeter lights, garden and landscaping.

Products are made in Canada to order and to specification. Standard production time is 10 days. Materials ship in maximum of 6ft sections which are connectable to form longer lengths.