


# StarScape


Standard stocked, small area kits

Install any area up to 96 square feet with this stocked and ready-to-go kit!

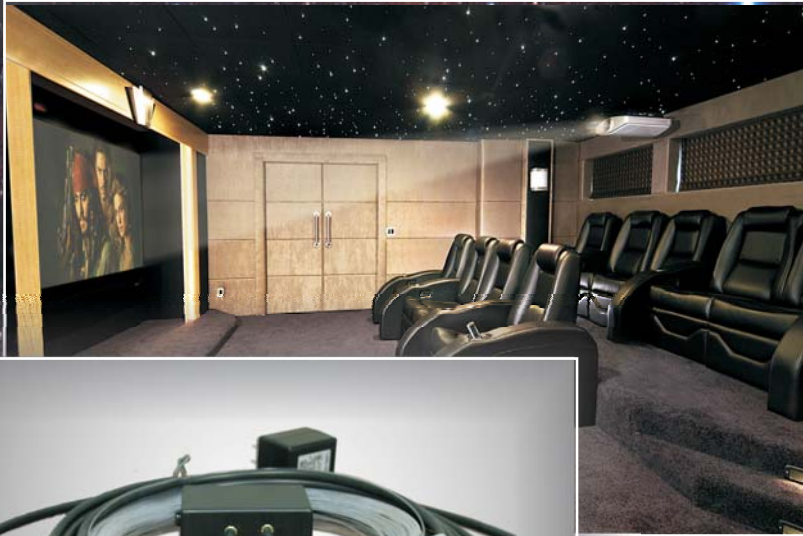

StarScape LED kits are comprised of three components: the light source, a super bright white LED Driver with a life up to 50,000 hours, the pre-assembled and highly polished extension harness(es) couple securely to the LED Driver and various star bundles. 4 standard stocked kits can create star fields ranging in size from 24 to 96 sq feet in area, with densities ranging from .5 to 5 stars per sq foot.

After the Star bundle is mounted in the ceiling panel, it plugs into the extension harness coming from the LED Driver. Installations take less time, they're easier to plan, execute and last longer when compared to traditional installation methods.

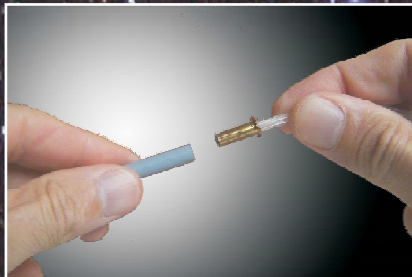

Our very efficient two part system: minimizes clutter and tangles, does not require fiber measuring or cutting and there are NO SPECIAL TOOLS REQUIRED! The entire system is plug-and-play, so installations are cost efficient hassle free. The super bright, silent LED light

source mimics the blue/white color of most stars, without worrying about heat or cooling the unit.

**A smaller version of our star ceiling system offering the quality and speed of our standard kit, with the convenience and cost effectiveness of a standard product!**

## FEATURES

- 4 Standard off-the-shelf systems accommodate room sizes from 24 sq ft (2.2Sq M) to 96 (9sqM) sq ft.
  - 24 feet
  - 48 feet
  - 72 feet
  - 96 feet

*(For larger sizes and special shapes, use our original starscape system.)*

- Star density from .5 to 5 stars per sq ft. (.092M) to customize the scale and look.
- Separate harness and star bundles allow drilling and mounting to be done on the floor or in the shop. Once in place, star bundles are "plugged in to the extension harness....no tools required, minimal time spent in tight spaces, much less mess and confusion - a HUGE time savings!
- Pre-finished harness assemblies provide optimal coupling efficiency. Extra length allows the light source to be mounted in closet or wall panel...great for the end user!
- LED light source - Rated for up to 50,000 hours... never change a lamp again!
- Twinkling effect optional.



CORPORATE HEADQUARTERS

***fiberoptics technology incorporated***  
*Established 1977*

1 Quassett Road, Post Office Box 286, Pomfret, Connecticut 06258

PHONE 800.433.5248 • FAX 860.928.7664 • WEBSITE: [www.fiberoptix.com](http://www.fiberoptix.com) • E-MAIL: [info@fiberoptix.com](mailto:info@fiberoptix.com)

